CALORIC

ULTRAMATIC PORTABLE DISHWASHER

MODEL C 221

OWNERS MANUAL

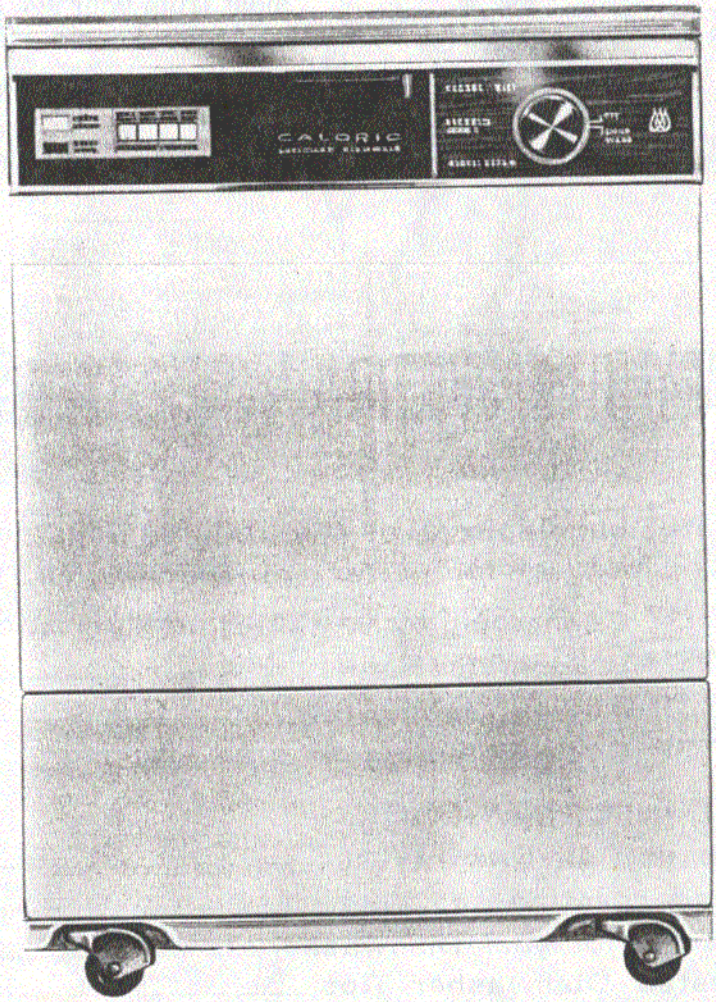

Read this booklet and keep it in a handy place for future reference.

88645A

CYCLE SELECTION AND STARTING - MODEL C221

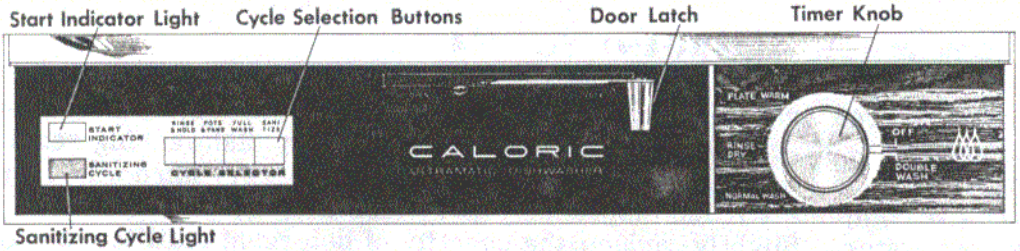

There are seven automatic cycles to satisfy every dishwashing need. To start the dishwasher, close the dishwasher door and move the handle to "LOCK" position. Press the selector button for the cycle desired, then turn the timer dial slowly clockwise until the "START INDICATOR" light glows. Your dishwasher will need no further attention. It will complete the cycle selected and shut itself off. There is no need to reset the cycle selector button if the same cycle is used repeatedly.

Important! The Timer Dial Must be Turned Only in a CLOCKWISE Direction.

RINSE & HOLD (Figure 1)

To rinse dishes which are going to stand in the dishwasher for some time before being washed.

1. Close door and move handle to "LOCK."
2. Push button for "RINSE & HOLD."
3. Advance timer dial slowly to "DOUBLE WASH" indication (until "START INDICATOR" light glows).
4. "START INDICATOR" light goes out when cycle is completed.

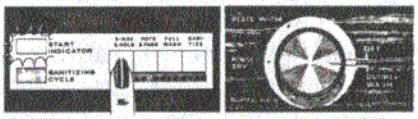

Figure 1.

PRE-WASH CYCLE (Figure 2)

For softening soil on utensils prior to washing in "DOUBLE WASH" and for items you wish to remove and finish by hand.

1. Load open cup (1st Wash).
2. Close door and move handle to "LOCK."
3. Push button for "POTS & PANS."
4. Advance timer dial slowly to "DOUBLE WASH" indication (until "START INDICATOR" light glows).
5. "START INDICATOR" light goes out when cycle is completed.

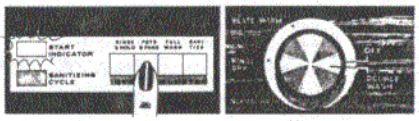

Figure 2.

DOUBLE WASH CYCLE (Figure 3)

For heavily soiled dishes and utensils.

1. Load both detergent cups (1st Wash and 2nd Wash).
2. Close door and move handle to "LOCK."
3. Push button for "FULL WASH."
4. Advance timer dial slowly to "DOUBLE WASH" indication (until "START INDICATOR" light glows).
5. "START INDICATOR" light goes out when cycle is completed.

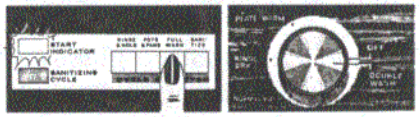

Figure 3.

SANITIZING CYCLE — DOUBLE WASH (Figure 4)

For Hygienic washing of dishes, glasses, utensils.

1. Load both detergent cups (1st Wash and 2nd Wash).
2. Close door and move handle to "LOCK."
3. Push button for "SANITIZE."
4. Advance timer dial slowly to "DOUBLE WASH" indication (until "START INDICATOR" light glows).
5. "START INDICATOR" light goes out when cycle is completed.

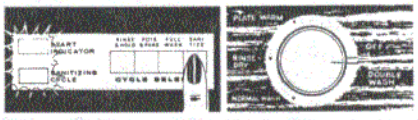

Figure 4.

SANITIZING CYCLE LIGHT

When the red "Sanitizing Cycle" light glows on the control panel it means the cycle is being temporarily delayed until the the water temperature reaches 150° F. Water action will continue during this delay period but the cycle will not progress automatically until after the light goes out. The "Sanitizing Cycle" light will not glow if the water temperature is at 150° F. and there will be no delay.

NORMAL WASH CYCLE (Figure 5)

For normally soiled dishes.

1. Load covered cup (2nd WASH).
2. Close door but do not lock.
3. Advance timer dial to "NORMAL WASH" indication.
4. Push button for "FULL WASH."
5. Move door handle to "LOCK."
6. "START INDICATOR" light goes out when cycle is completed.

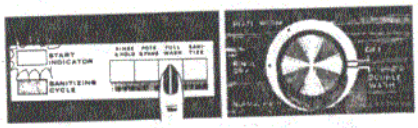

Figure 5.

RINSE-DRY CYCLE (Figure 6)

For brightening seldom-used items just before a party or at housecleaning time.

1. Close door but do not lock.
2. Advance timer dial to "RINSE-DRY" indication.
3. Push button for "FULL WASH."
4. Move door handle to "LOCK."
5. "START INDICATOR" light goes out when cycle is completed.

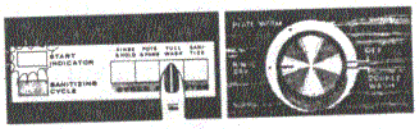

Figure 6.

PLATE WARM CYCLE (Figure 7)

To warm plates for the proper serving of food.

1. Close door but do not lock.
2. Advance timer dial to "PLATE WARM" indication.
3. Push button for "FULL WASH."
4. Move door handle to "LOCK."
5. "START INDICATOR" light goes out when cycle is completed.

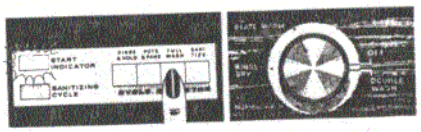

Figure 7.

DISHWASHER CYCLE IN MINUTES

Timer Dial Setting	"Double Wash"				"Normal Wash"	"Rinse Dry"	"Plate Warm"
Selector Button	Rinse & Hold	Pots & Pans	Full Wash	Sani-tize	Full Wash	Full Wash	Full Wash
Action	Pre-Rinse	Pre-Wash	Double Wash	Hygienic Wash	Single Wash	Rinse & Dry	Plate Warm
Fill Detergent Dispenser	None	Cup #1	Both Cups	Both Cups	Cup #2	None	None
Automatic Timer Adjustment	1	1	1	1			
1st Wash	8	8	8	8			
1st Rinse		3½	3½	3½			
2nd Rinse		3½	4	4	½		
2nd Wash			8*#	8*§#	8*#		
3rd Rinse			3½	3½	3½	3½	
4th Rinse			5#	5§#	5#	5#	
Dry			16	16	16	16	16
Total Time	9	16	49	49§	33	24½	16

* Detergent Released Automatically
\# Rinsing Agent Released Automatically
§ Plus Time Required to Heat Water to 150° F.

Times shown for washes and rinses include fill and drain periods.